


## Simulatörün (Sim6802) 64-bit sistemlerde DOSBox ile kullanımı

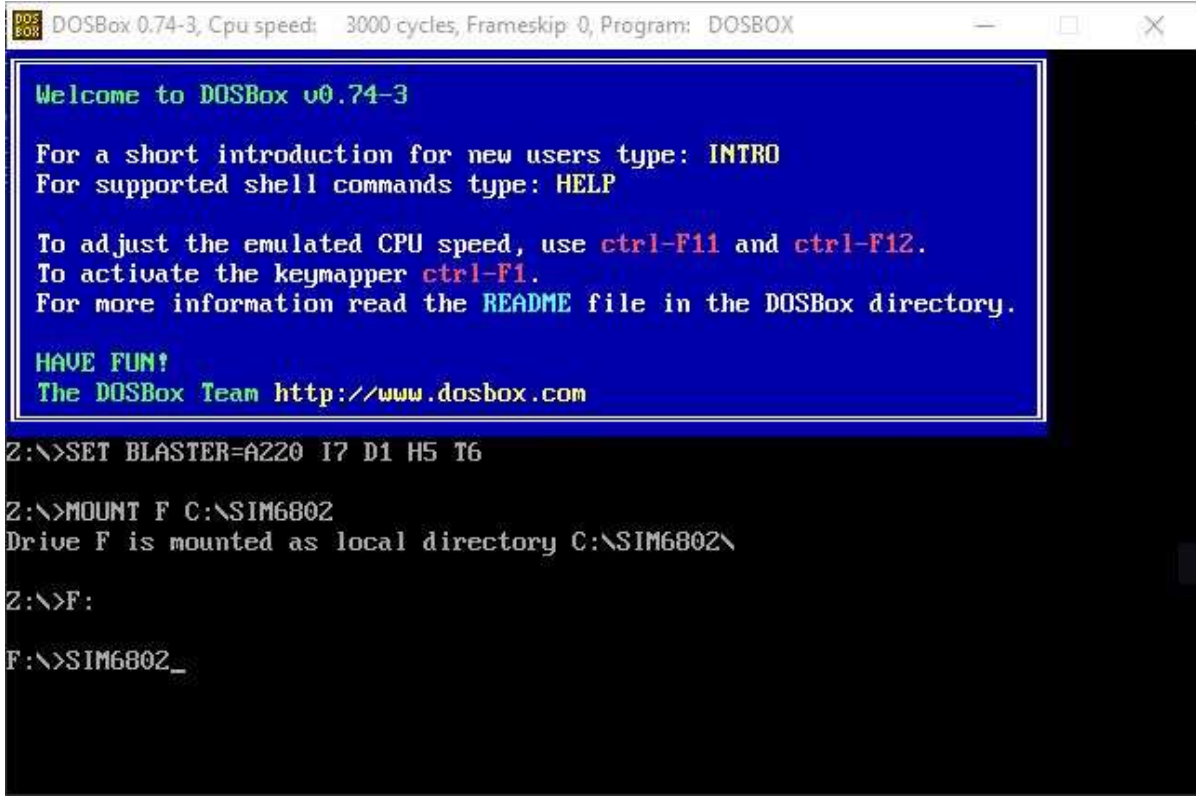

DOSBox 0.74-3, Cpu speed: 3000 cycles, Frameskip: 0, Program: DOSBOX

```
Welcome to DOSBox v0.74-3

For a short introduction for new users type: INTRO
For supported shell commands type: HELP

To adjust the emulated CPU speed, use ctrl-F11 and ctrl-F12.
To activate the keymapper ctrl-F1.
For more information read the README file in the DOSBox directory.

HAVE FUN!
The DOSBox Team http://www.dosbox.com

Z:\>SET BLASTER=A220 I7 D1 H5 T6

Z:\>MOUNT F C:\SIM6802
Drive F is mounted as local directory C:\SIM6802\

Z:\>F:

F:\>SIM6802_
```

